

INSTALLATION INSTRUCTIONS

NB: It is imperative that the glass is prepared as per instructions for the windogripper to adhere as intended.

On extremely cold days or where there is condensation on the glass, wait for the weather to warm up and dry the window completely before installing the base plates.

On larger windows place one windogripper in each corner on the inside of the window.

On smaller windows the windogripper is installed in the centre and on both sides. Gripper consists of a triangular base plate and a securing rectangular arm

Step 1: Clean glass areas where base plate is to be installed with rubbing alcohol or clear acetone (nail polish remover). Dry area that has been cleaned.

ATTACHING TRIANGULAR BASE PLATES

Step 2: with the WG logo facing towards you, screw the fitting provided into the triangular base until the thread of the fitting is level with the underside of the base. This prevents any adhesive entering the threaded hole.

Apply adhesive to either the base of the triangle or onto the glass area where the base is to be attached. **Do not use too much adhesive.**

Wiggle the base to flatten the adhesive, press **firmly** and hold in position for approximately 10 seconds. Remove the threaded fitting.

Clean any adhesive residue around the base with the acetone.

Apply base plates to all windows and allow to set for 24 hours. (do not tamper with base plates until set)

ATTACHING RETAINING ARMS:

The retaining arm secures the base to the inside of the window frame.

Step 3: Temporarily screw the arm to the baseplate and check the gap between the arm and the base plate. If a gap exists insert the washer for final installation.

Step 4: Detach arm, assemble the screw, washer arrangement as per illustration.


Place a dab of adhesive where the end of the arm will rest on the frame.

Insert screw through the hole, position end of arm onto frame, press firmly and tighten screw.

Hold arm whilst tightening. **(Do not overtighten)**

Step 5: Fit and press either white or black cover over screw head to match the frame.

arm assembly

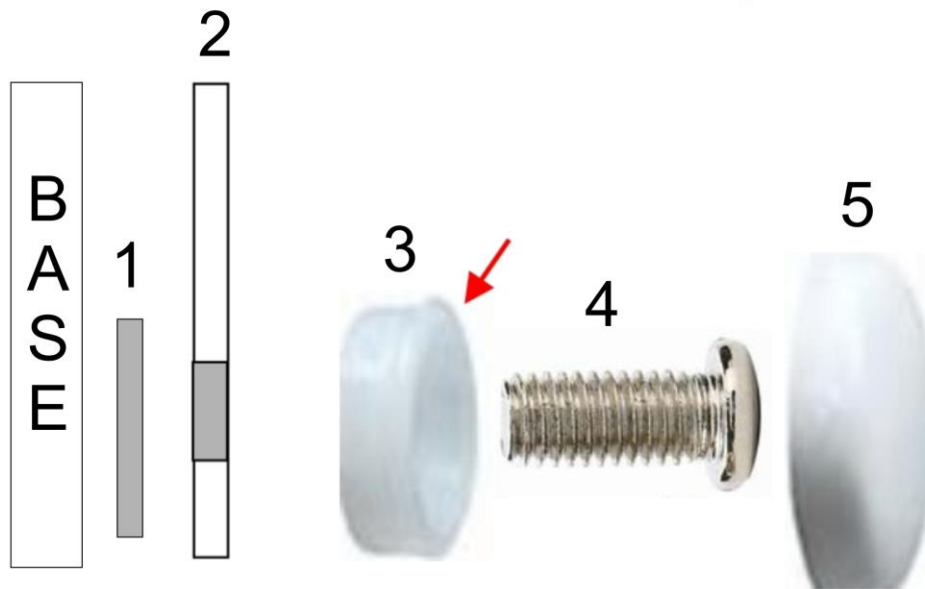

- 1 steel washer
- 2 securing arm
- 3 nylon base (raised collar)
- 4 screw
- 5 cover